


## Turning the Baptistry Heater On

The baptistry water heater requires that the water pump is running. It takes a few hours for the water to heat sufficiently for a baptism.

1. **Water Pump.** Turn on the water pump by activating the On Demand timer switch in the baptistry equipment room. Choose the time that will be needed for use of the baptistry heater.

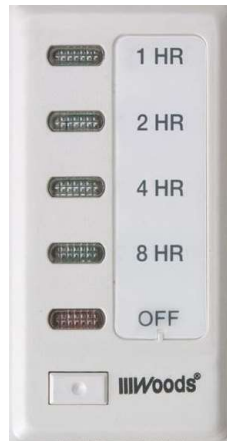

2. **Water Heater.** The water heater is behind the baptistry wall. To turn the heater on, press the “Spa On” button and adjust the temperature using the up and down arrow buttons.



## Turning the Baptistry Heater Off

1. **Water Heater.** Press the “Heater Off” switch on the water heater.
2. **Water Pump.** Select the “Off” setting on the On Demand timer switch. Note: The water pump and waterfall may still be turned on, depending on the schedule programmed in the timer control device.