

## Baptistry Water Level

It is important to maintain the proper water level for the baptistry. The water level should be about half way up the water outflow.

1. To add water to the baptistry, open the water valve located just inside the door of the baptistry utility room.
2. Actively monitor the water level while the valve is open and water is being added to the baptistry.
3. Be sure to shut off the water valve when the water level reaches the appropriate height. Do not overflow the baptistry.

